


SETUP

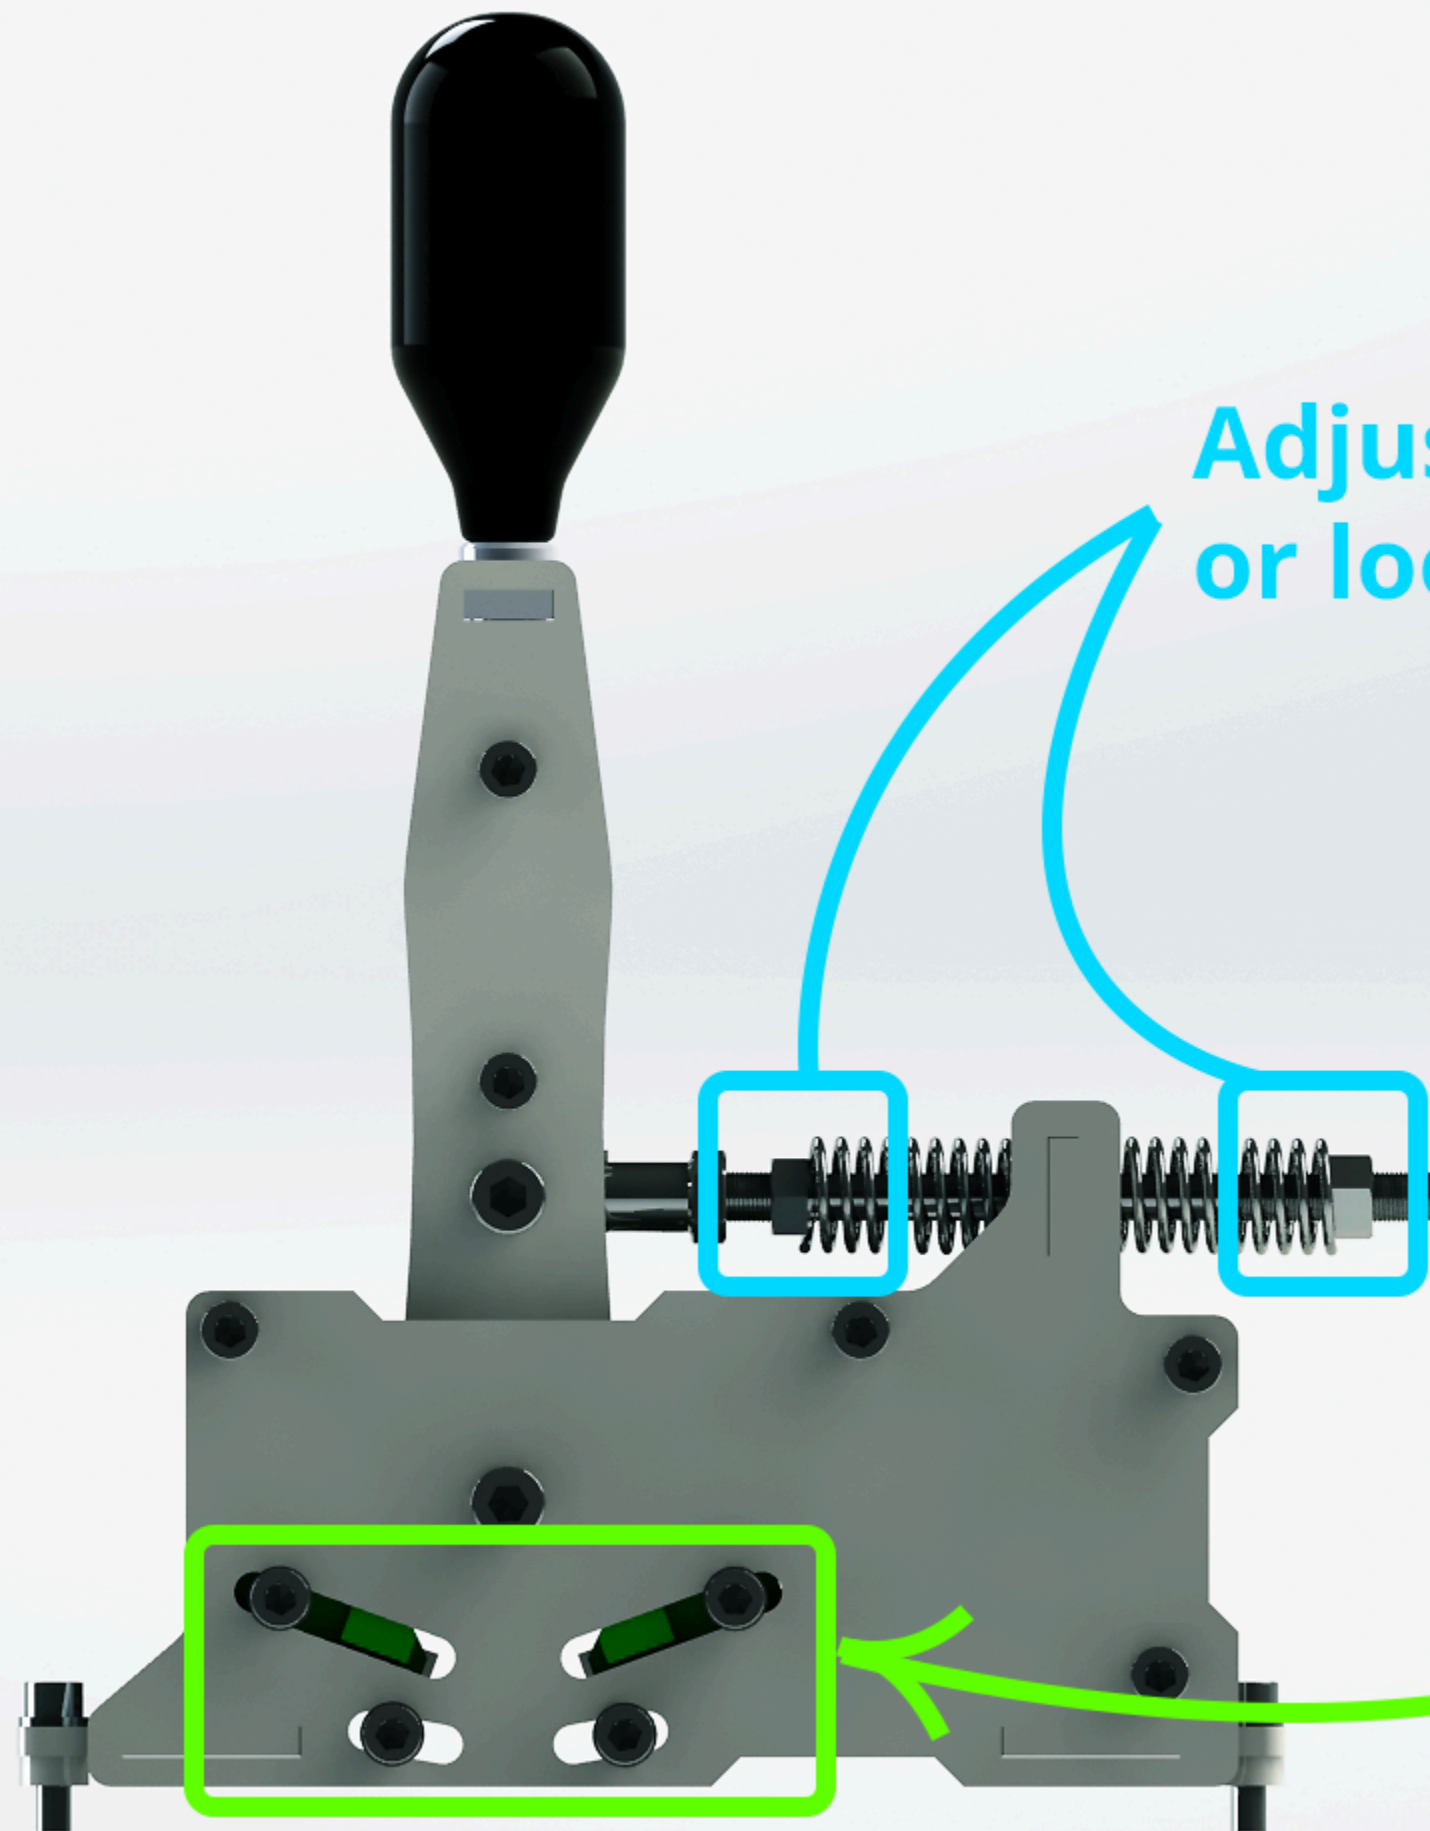

Adjustment of the hardness by tightening or loosening the nuts.

Set here the range of the lever.
You must set the spacers and the
Microswitch Support together.