


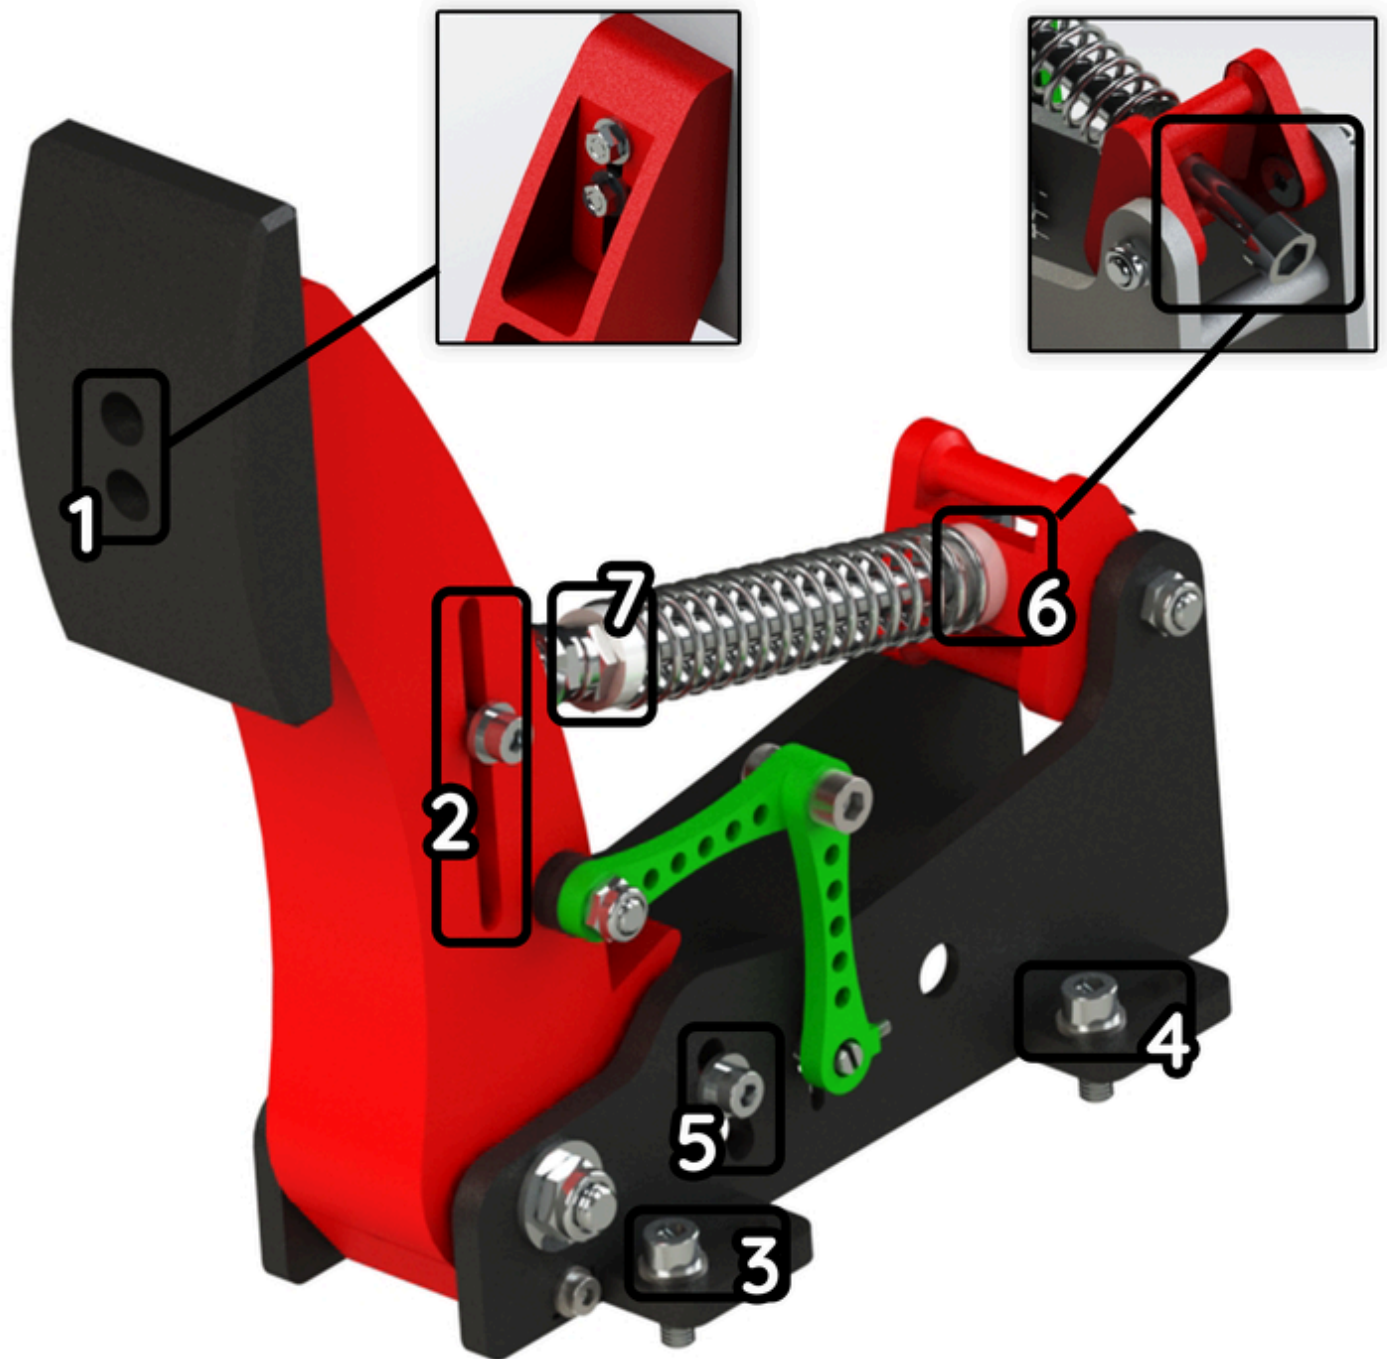

- 1) Change the **top/bottom footrest position** with the **oblong hole**. If you use the alternative footrests, you can change the **right/left footrest position** by changing the position of the countersunk screws.
- 2) Move the Rodend **up** to **increase** hardness, move it **down** to **decrease** hardness
- 3) & 4) Oblong hole to move **forward/backward** the pedal
- 5) Set here the **stop limit** of the pedal
- 6) Unscrew the M8x150 bolt to **increase hardness**, screw it to **lower hardness**
- 7) Screw the M8 nut to compress the spring and **increase hardness**, unscrew it to **lower hardness**