


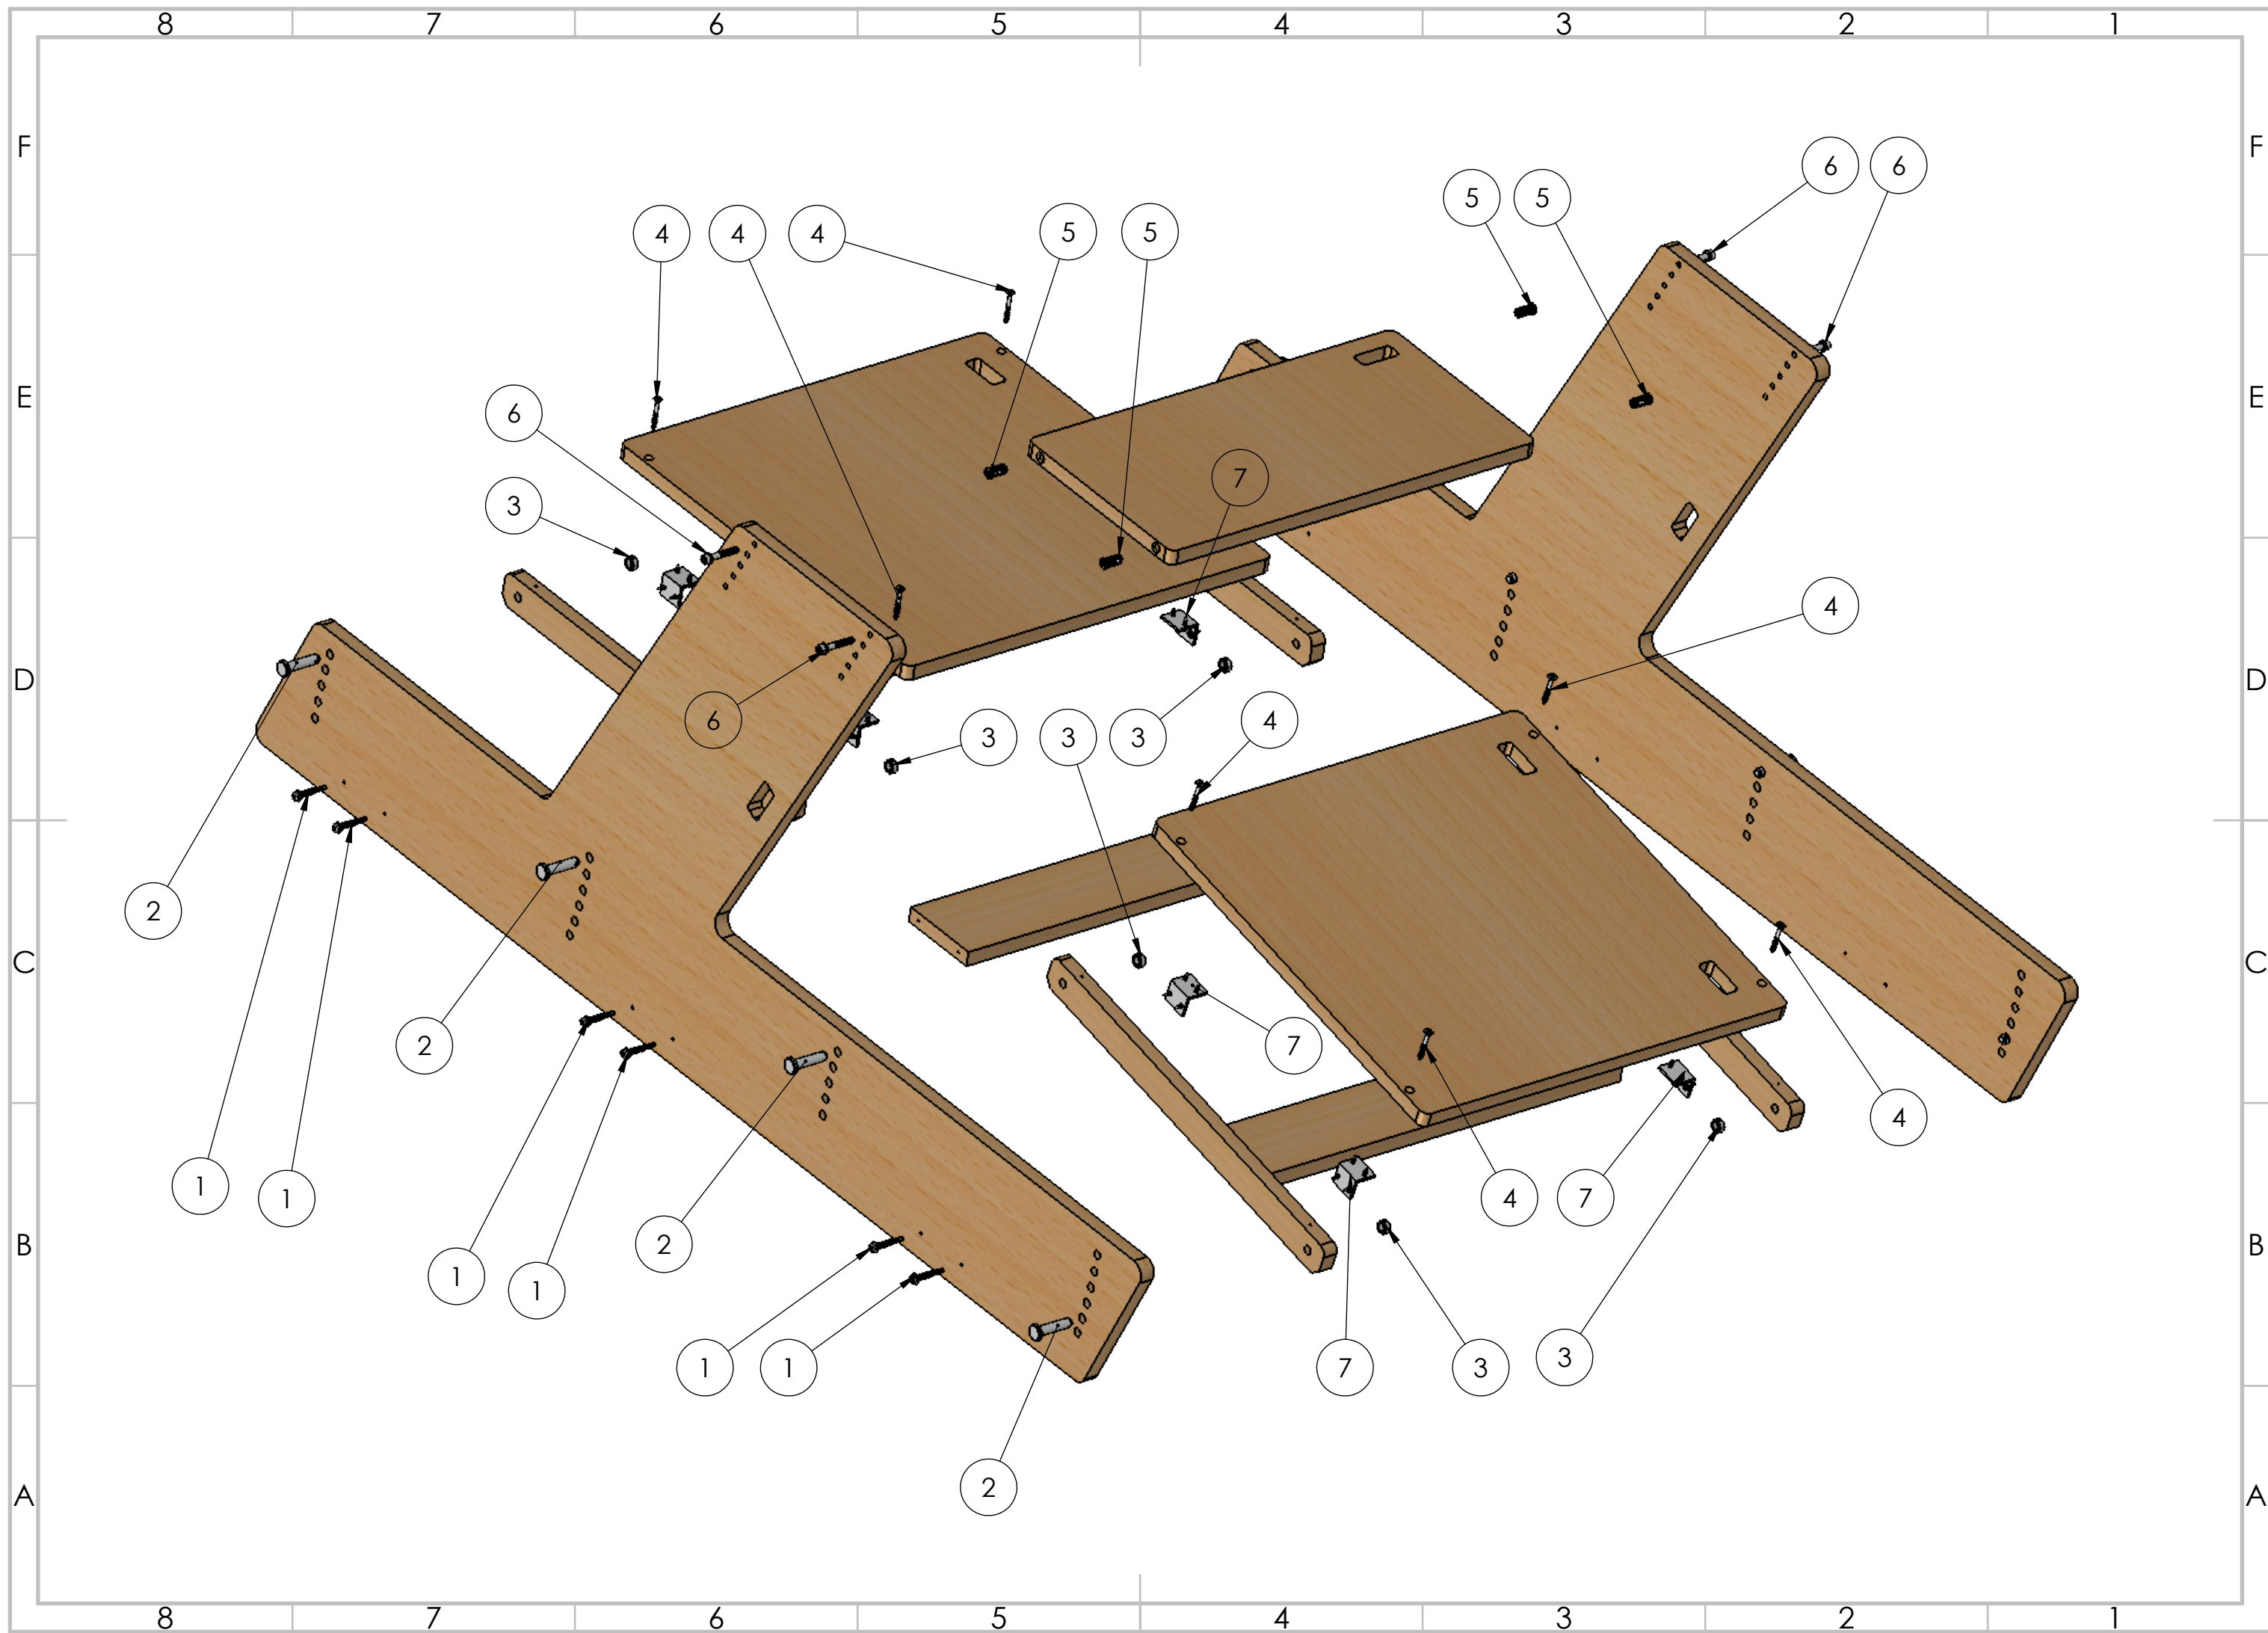

	8	7	6	5	4	3	2	1	
F	ID Number	Pieces	Qte	Note					F
E	1	M5x50 Wood Screws	12	Fixing the two Main Plates to the Reinforcement Plate					E
D	2	M10x40 Pin With Hole or Shaft Circlip	8	Fixing the two Main Plates to the 4 Bottom Support					D
C	3	Drill Bit Stop Collar Inner Diameter: 10mm	8	Used to lock the M10x40 pin					C
B	4	M4x40 Wood Countersunk Screws	8	Fixing the Seat and Pedals Support to the Bottom Support					B
A	5	M6x20 Wood Insert Nut	4	They must be inserted onto the sides of the "Steering Wheel Support" part.					A
	6	M6x40 Half Threaded Bolt + M6 Washers	4	Fixing the Steering Wheel Support to the Main Plates					
	7	Brackets + M3x16 Wood Screws Brackets recommended size: 34x24x24	Brackets: 8 M3x16 Wood Screws: 32	Brackets used to reinforce the connection between the "Bottom Support" and "Seat and Pedals Support" parts					
	8	7	6	5	4	3	2	1	