



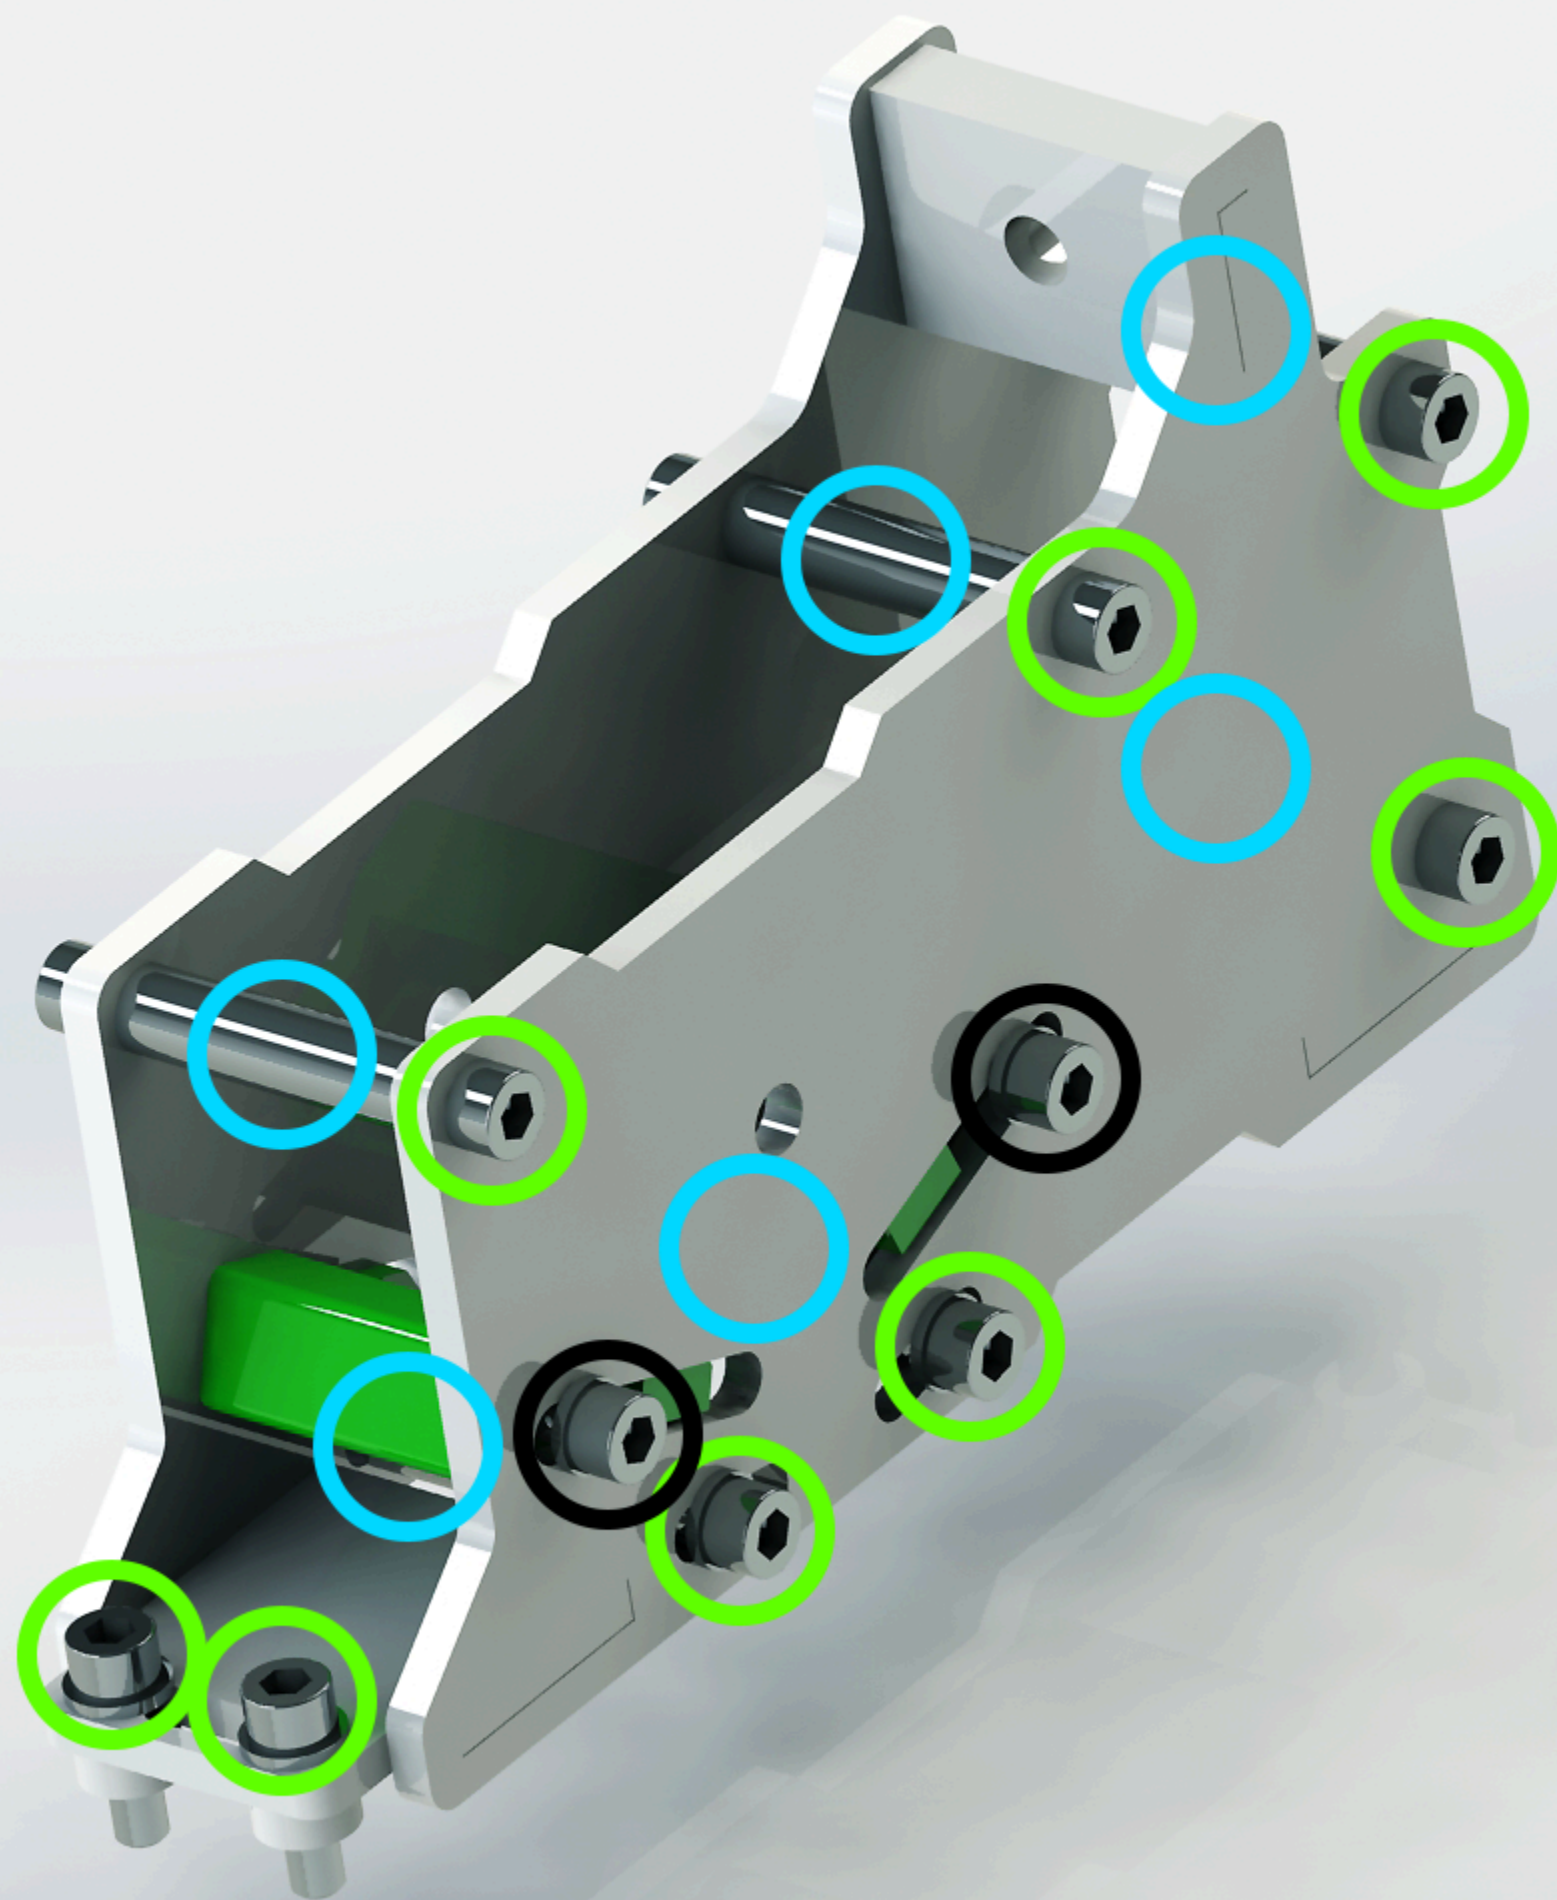


 M6x10 Screws (Quantity : 16)
M6 Washers (Quantity : 8)

 M6x40 Spacers (Quantity : 6)

 M6x16 Screws (Quantity : 4)
M6 Washers (Quantity : 4)

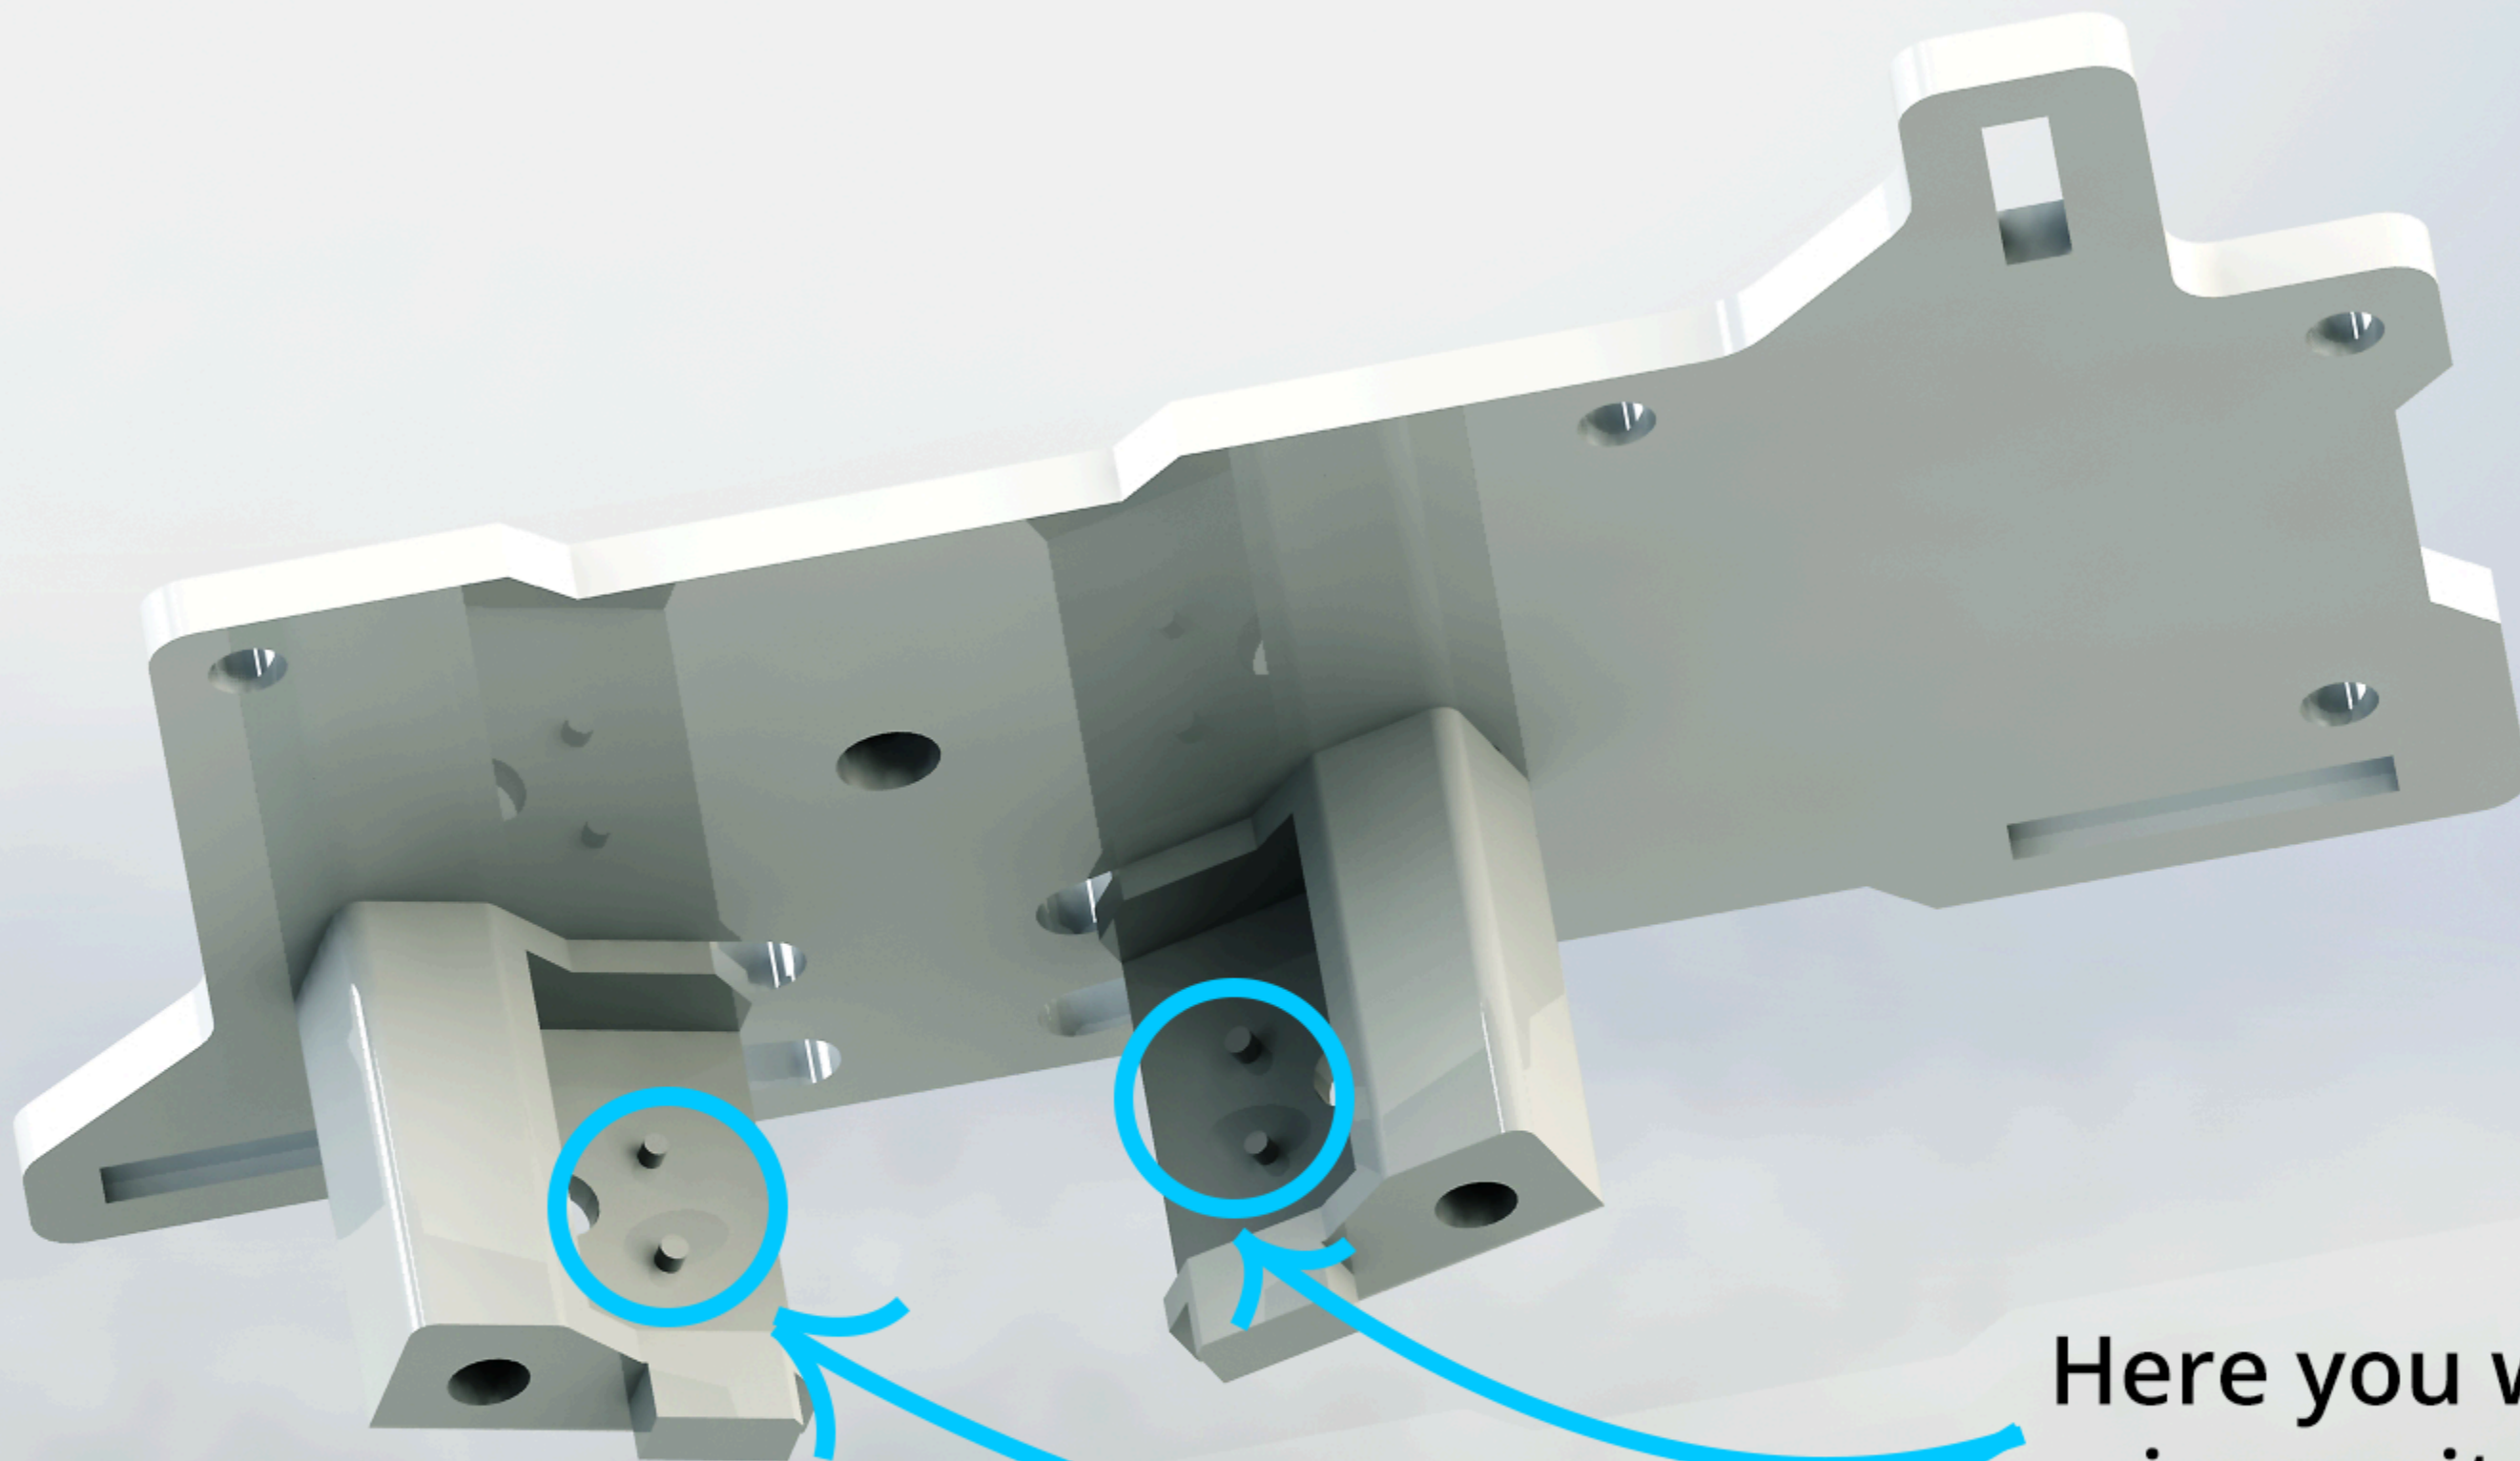

Here you will have to fix the microswitches with glue (after soldering).

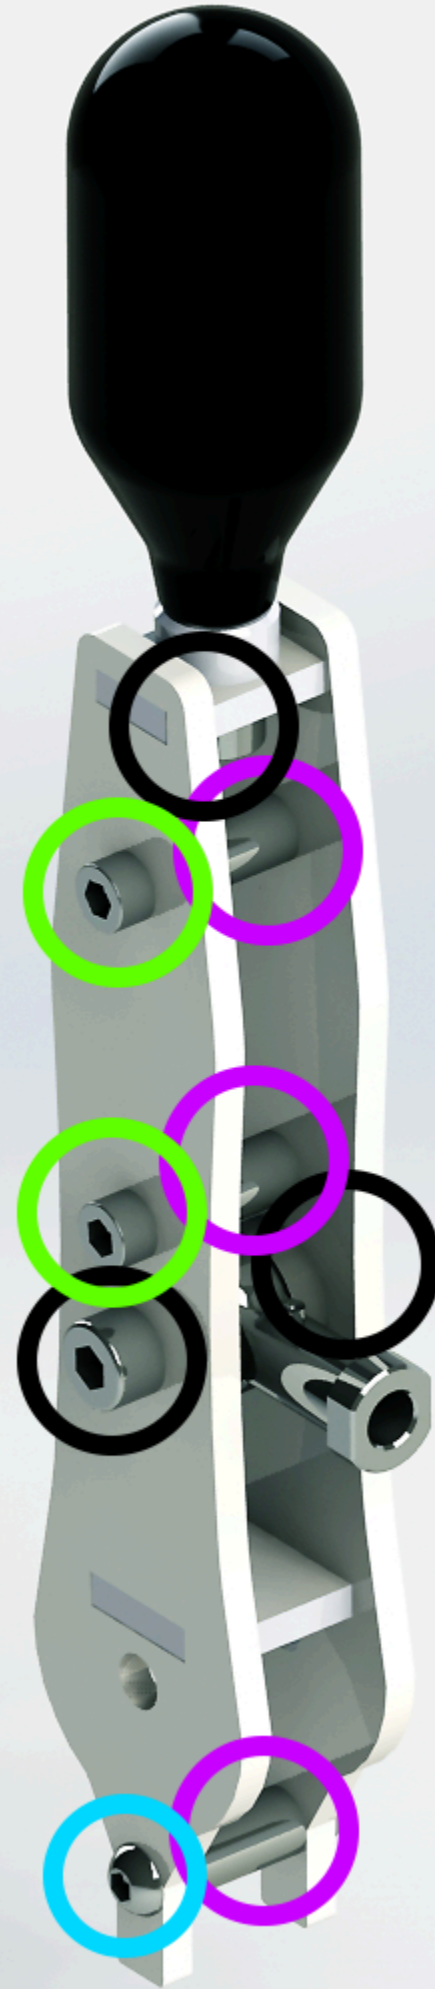

M6x10 Screws (Quantity : 4)



M6x10 Button Head Screws
(Quantity : 2)



M8x40 Screws (Quantity : 2)
M8 Lock Nut (Quantity : 1)



M6x20 Spacers (Quantity : 3)